



FINNISH SAUNA JF210


Specifications and assembly instructions

SPECIFICATIONS



| | |
|-------------------|---|
| Model | JF210 |
| Dimensions | 2100x1600x2005 mm |
| Number of persons | 6 |
| Wood | Hemlock, 48 mm |
| Glass | Transparent, tempered, 8 mm |
| Hinges | INOX |
| Control | Touch control panel |
| Operating time | Up to 90 min |
| Temperature | Up to 90 °C |
| Ventilation | Yes |
| Connectivity | USB, Bluetooth, Radio, App |
| Lighting | LED RGB starry sky |
| Stove | 9 kW, with thermostat, timer and volcanic stone |
| Connection | Three-phase: Euro socket 400 V, 50 Hz, or conductor 5 x 2,5 mm ² and 3 x 16 A fuse |
| Weight | 330 kg |

COMPONENTS

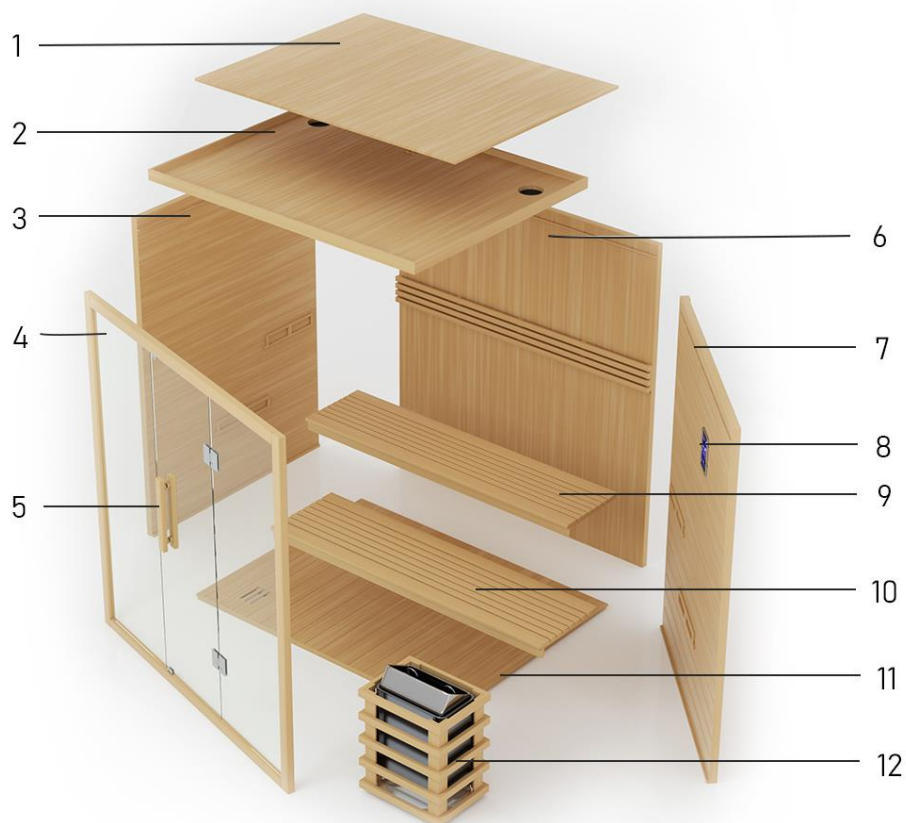

- 1 Cover plate
- 2 Ceiling panel
- 3 Left side
- 4 Front page
- 5 Handle
- 6 Back plate

- 7 Right side
- 8 Control panel
- 9 upper bench
- 10 Lower bench
- 11 Bottom
- 12 Stove

 
RECOMMENDED TOOLS



Screwdriver



Meter



Screwdriver



Screws



Water scale



Imbus key



Knife



Ladder

ASSEMBLY TIPS

Please remove the transport packaging and check that your sauna has been delivered complete and undamaged before starting assembly. At least three people are required to assemble the sauna.



ASSEMBLY STEPS



1. Back plate



2. Left side



3. Right side



4. Bottom



5. upper bench




6. Lower bench



7. Heater



8. Front panel

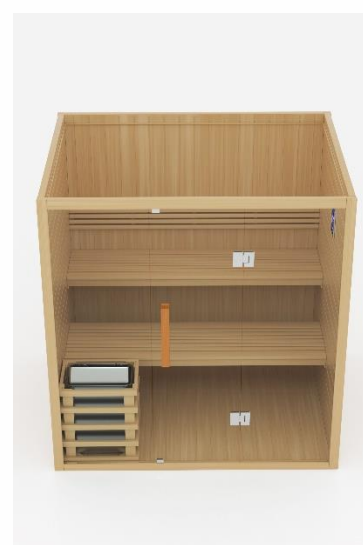

9. Handle






10. Ceiling panel




11. Cover plate

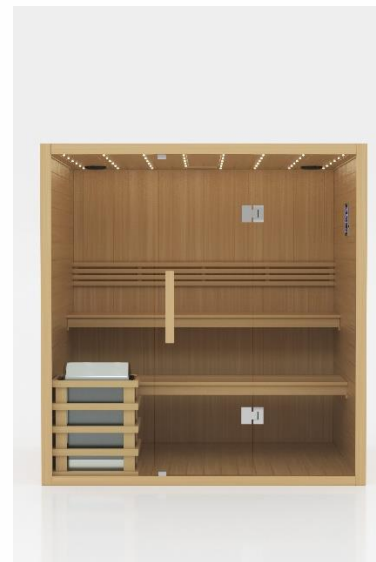


12. Composite sauna


Installing the outer buckle

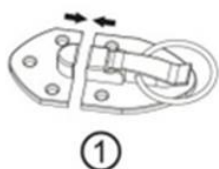

①

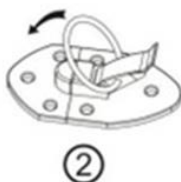

②

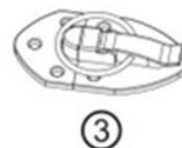

③

Connecting electrical components



1. Connect the blue UTP cable from the control panel to the sauna control unit..



2. Connect the power cables between the control unit and the stove.

Installation of hinges, handle and cover



1. Install the hinges



2. Install the handle



3. Install the cover plate



CONNECTING THE STOVE TO THE ELECTRICAL NETWORK

AC out is connected to the stove without grounding. (GRND)




AC in - conductor 5 x 2.5 mm² (supplied by customer)



AC out – cable (included with purchase), which goes along the side to the furnace.

Contact cable between control plates and stove.


230 V Schuko plug

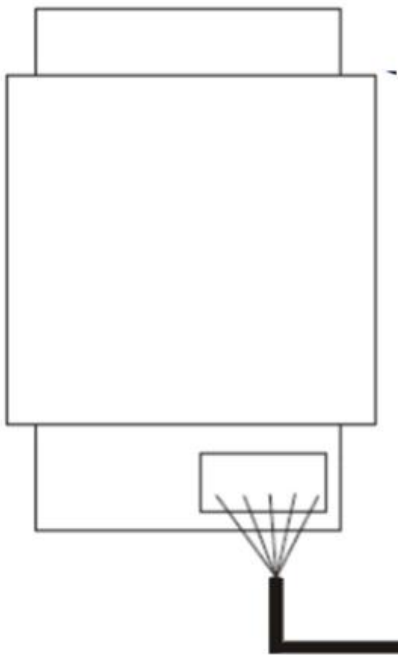

Removing information plate enables connection

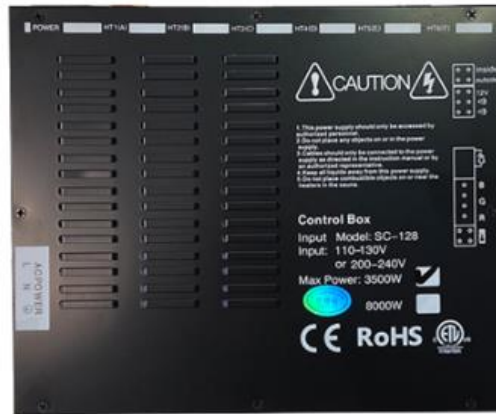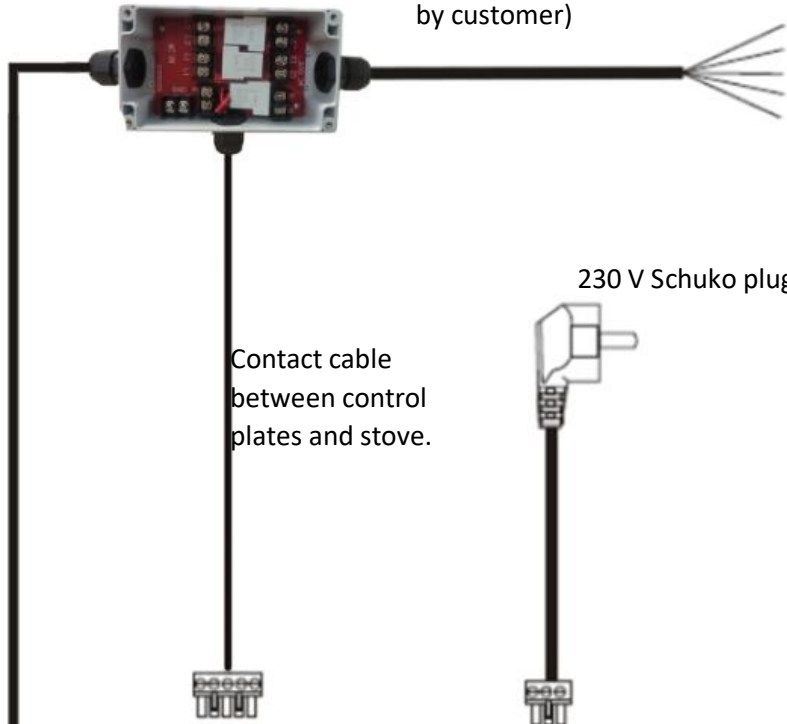

UTP cable (communication between control panel and control unit)

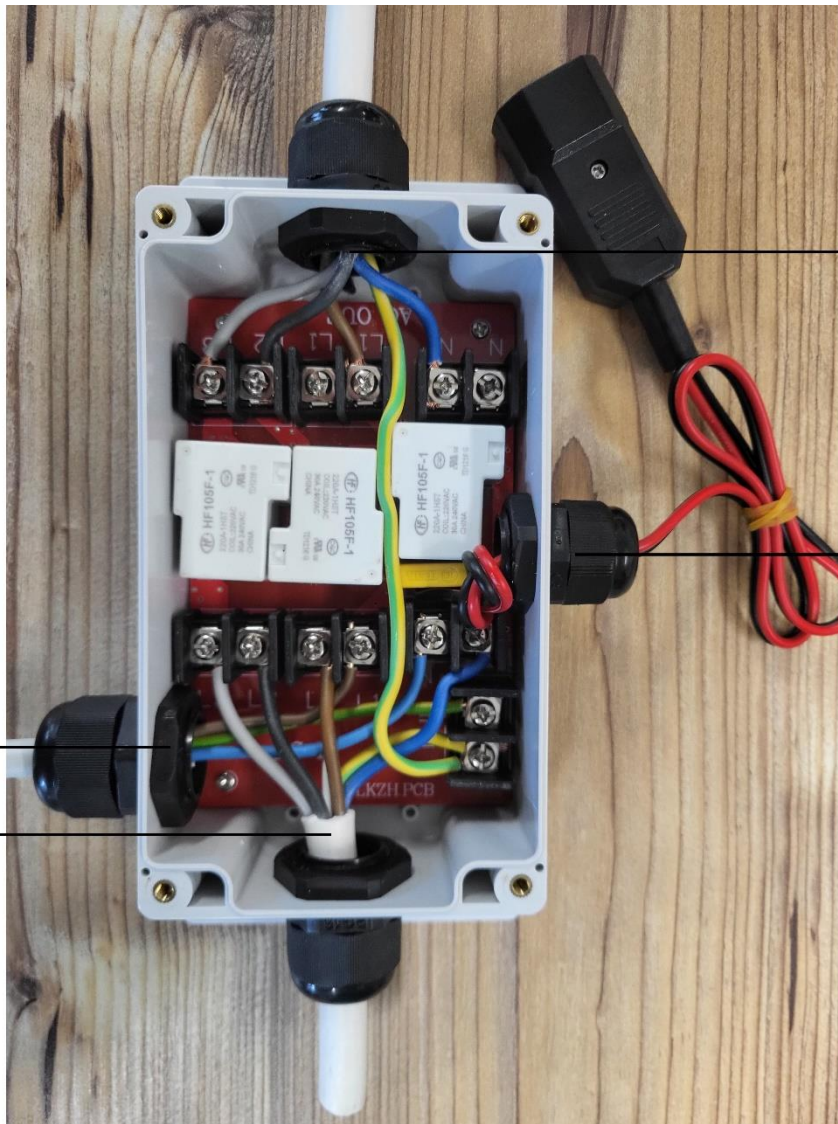

Control unit power supply

Your line (IN):
3 x 4 mm² conductor
or
5 x 2.5 mm² conductor
(0)

Line or guide
in the stove (OUT):
conductor 3 x 4 mm²
or
conductor 5 x 2.5 mm²
(0)

Communication with the
control unit

WIRING DIAGRAM

